



vulcan X-Coat 115

主な特徴（エックスコート）

【製版でのメリット】

- ・刃がひっかかりにくく切りやすい
- ・カットした部分が剥がしやすい
- ・繰り返し使えるので製版の負担が軽減

【印刷機でのメリット】

- ・トラッピング不良がおきにくい
- ・平滑性が高くニスの転移が良い
- ・ロングランでの安定した転移が実現

【主な用途】

ニスコーター

Xコート115は表面がゴムで布がない新しいコーター用版材です。



Vulcan X-Coat 115



製品概要

対応ニス	水性ニス/UVニス
表面ゴム色	レッド
表面素材	NBRゴム(マイクロバフ加工)
表面粗度 (Ra micron)	0.6
厚さ	1.15mm±0.05mm (ベース0.35mm) ※総厚1.35、1.95mmのタイプもございます。
フィルム素材	ポリエステル
特記事項	
カットの際の注意	CADでカットする際はフィルム部を傷つけないように注意して下さい。

Distributed by:

GADELIUS

Established 1890

DISTRIBUTOR

ガデリウス・インダストリー株式会社 ニューパックソリューションズ部

<東京本社>

〒107-0052 東京都港区赤坂7-1-1 青山安田ビル4F

TEL:03-5414-8761 FAX:03-5414-8755

<神戸支店>

〒650-0001 兵庫県神戸市中央区加納町4-4-17 ニッセイ三宮ビル15F

TEL:078-331-6572 FAX:078-331-6582

www.trelleborg.com/printing

The information contained in this document is intended to provide guidance. The information is NOT a specification and all figures in the document are nominal. This document and the information it contains do not create any warranties for any product and Trelleborg Printing Solutions disclaims any warranty of merchantability or fitness for a particular purpose for the product described in this document. This document discloses information that is proprietary to Trelleborg Printing Solutions. The receipt or possession of the document does not confer any right to reproduce or disclose the document, any information contained in it, or any physical article or device, or to practice any method or process except by written agreement with Trelleborg Printing Solutions. Trelleborg Printing Solutions is committed to the ongoing development of its products. For that reason, Trelleborg Printing Solutions reserves the right to alter the actual specifications of its products without prior notice.


Xコート (エックス・コート)

コーターのための新しいカット版


	樹脂版	従来のカット版	ブランケット	Xコート
価格	×	○	◎	○
耐久性	◎	△	×	○
メリット	耐久性が良い 細かい柄に対応可能	樹脂版より安い プロッターがあれば自社加工可能	価格が安い 全ベタでは問題ない	樹脂版より安い 転移性が良い 紙離れが良い プロッターがあれば自社加工可能
デメリット	価格が高い	耐久性にバラツキ 細かい絵柄は対応できない	抜き作業が大変 繊維片が異物となる 抜くと耐久性が悪い	細かい絵柄は対応できない

【ご採用いただいた例】

一部置き換えでコストカット出来た A 社様

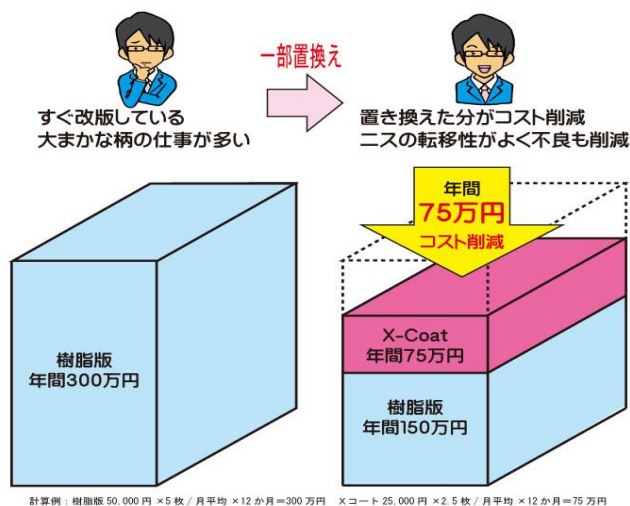

XC への置き換えで時間短縮が出来た B 社様

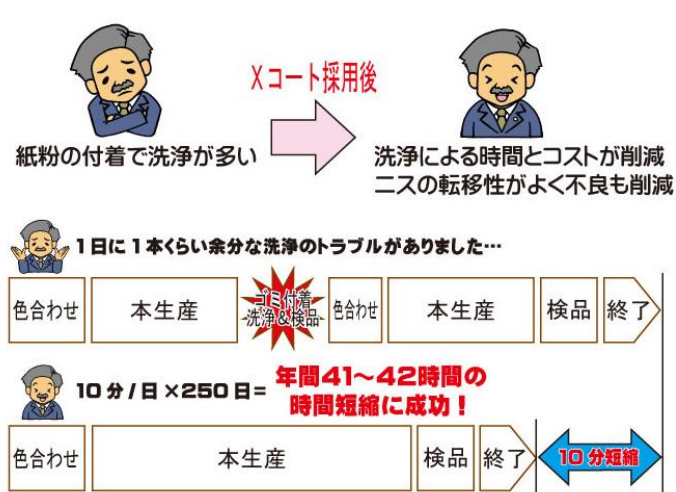

UVニスでも20万通しの実績あり (1万×20本)

コスト&ロス時間の削減に是非お試しください!



版加工は今まで全て外注だったけど…

ハーフカット（抜き加工）対応可能です!

ご支給いただくデータ、納期に関してはご相談下さい。

データ作成のマニュアルもお渡しいたします。



自社でカットしていたけど Xコートは?

カット方法のマニュアルあります!

カット練習用のサンプルもご用意いたします。



vulcan® X-Coat 195

主な特徴（エックスコート）

【製版でのメリット】

- ・刃がひっかかりにくく切りやすい
- ・カットした部分が剥がしやすい
- ・繰り返し使えるので製版の負担が軽減

【印刷機でのメリット】

- ・トラッピング不良がおきにくい
- ・ロングランでの安定した転移が実現
- ・ブランケットからの置換が簡単
- ・ベースフィルムが高い耐久性と見当性を実現

【主な用途】

ニスコーター

Xコート195は表面がゴムで布がない新しいコーター用版材です。



Vulcan X-Coat 断面イメージ



製品概要

対応ニス	水性ニス/UVニス
表面ゴム色	ブルー
表面素材	NBRゴム(マイクロバフ加工)
表面粗度 (Ra micron)	0.6
厚さ	1.95mm±0.05mm (ベース0.35mm) ※総厚1.15、1.35mmのタイプもございます。
フィルム素材	ポリエステル
特記事項	
カットの際の注意	CADでカットする際はフィルム部を傷つけないように注意して下さい。

Distributed by:

GADELIUS

Established 1890

DISTRIBUTOR

ガデリウス・インダストリー株式会社 ニューパックソリューションズ部

<東京本社>

〒107-0052 東京都港区赤坂7-1-1 青山安田ビル4F

TEL:03-5414-8761 FAX:03-5414-8755

<神戸支店>

〒650-0001 兵庫県神戸市中央区加納町4-4-17 ニッセイ三宮ビル15F

TEL:078-331-6572 FAX:078-331-6582


www.trelleborg.com/printing

The information contained in this document is intended to provide guidance. The information is NOT a specification and all figures in the document are nominal. This document and the information it contains do not create any warranties for any product and Trelleborg Printing Solutions disclaims any warranty of merchantability or fitness for a particular purpose for the product described in this document. This document discloses information that is proprietary to Trelleborg Printing Solutions. The receipt or possession of the document does not confer any right to reproduce or disclose the document, any information contained in it, or any physical article or device, or to practice any method or process except by written agreement with Trelleborg Printing Solutions. Trelleborg Printing Solutions is committed to the ongoing development of its products. For that reason, Trelleborg Printing Solutions reserves the right to alter the actual specifications of its products without prior notice.

Xコート (エックス・コート)

コーターのための新しいカット版

ブランケットからの置換で大幅なコストと時間の削減に成功したA社様

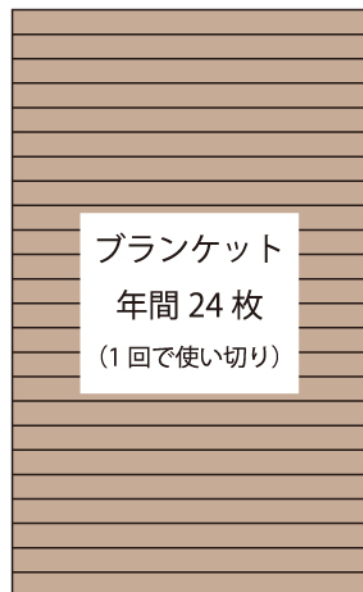

1 アイテムだけでこれなので
もっと増やしていきます!





ブランケットからの置換だとこんなメリットが!

- ★ベースがフィルムなのでへたりが少なく長持ちする
- ★ベースがフィルムなので見当精度が長くキープできる
- ★布層がないので繊維くずが発生しないから途中停止が少ない
- ★カットしやすいので現場が疲れない

～ハーフカットのコツ～

裏面から見た際に少しスジが入る程度がベストです。浅すぎても深すぎても上手くめくれません。手切りの場合は「シャリシャリ」となぞる感覚の深さで丁度良い具合になります。

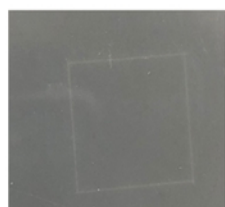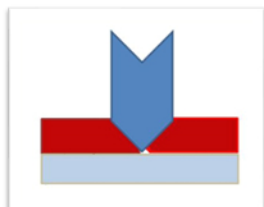

版加工は今まで全て外注だったけど...

ハーフカット (抜き加工) 対応可能です!
ご支給いただくデータ、納期に関してはご相談下さい。
データ作成のマニュアルもお渡しいたします。



自社でカットしていたけど X コートは?

カット方法のマニュアルあります!
カット練習用のサンプルもご用意いたします。